


Fire Alarm Control Panel

CL-2100



Operation

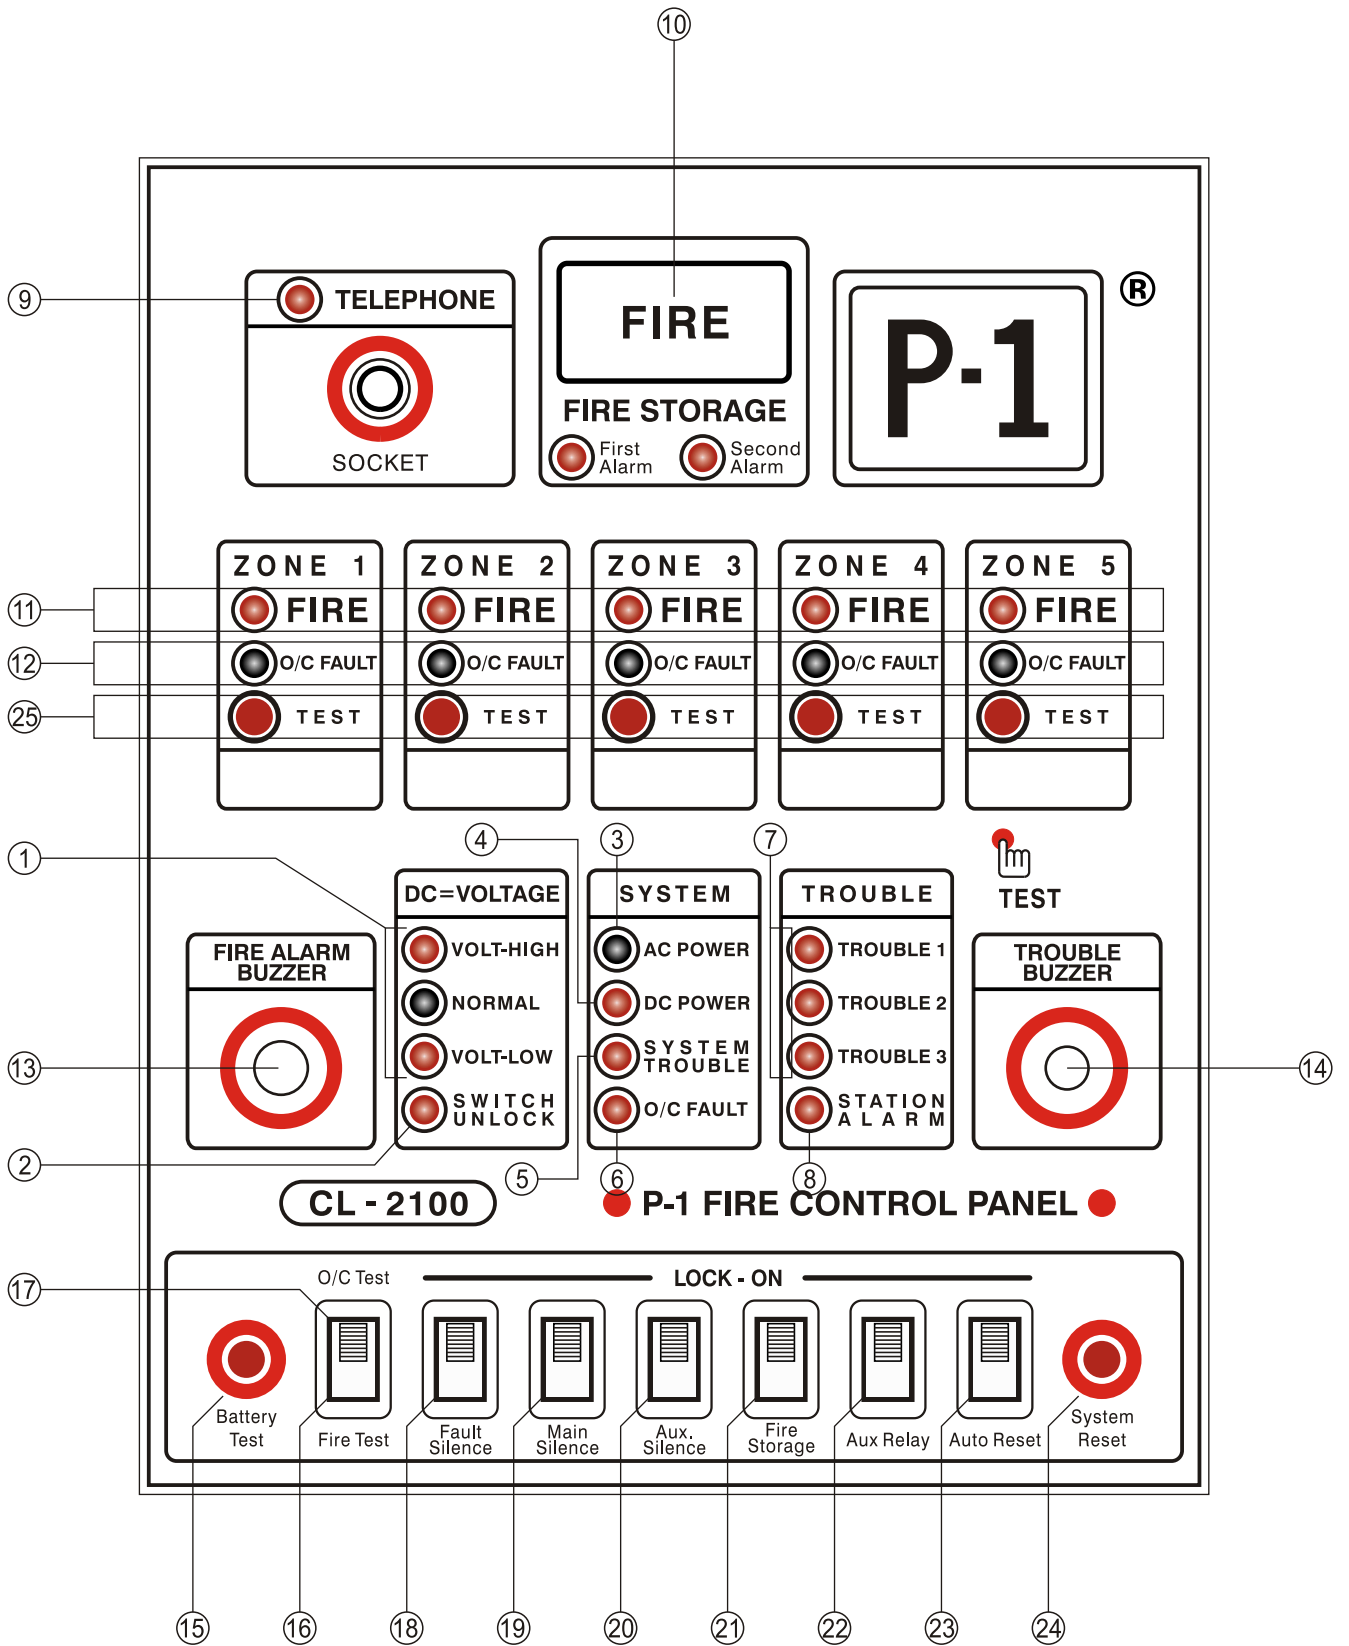

P1

※ **NORMAL CONDITION**

The normal condition refers to a control panel with no active events.

- ◆ The green **AC POWER** LED is lit (steady indication) .
- ◆ The green **NORMAL** LED is lit (steady indication) .
- ◆ No other LED indications are given.

※ **FIRE CONDITION**

- ◆ The control panel is in fire condition, i.e it is signalling a fire alarm.
- ◆ The **FIRE** indicator (red LED) is flashing.
- ◆ The zone which has detected the fire is indicated by **ZONE FIRE** lights.
- ◆ The internal control panel **FIRE ALARM BUZZER** sounds.
- ◆ External alarm devices are activated. (Bell : 24VDC, Aux relay dry contacts : NO)

※ **INDICATING LED**

- ① **DIGITAL VOLTMETER** : Indicating regular power supply. (Normal : 20VDC ~ 30VDC)
- ② **SWITCH UNLOCK** : Red LED is flashing once 1 sec.
- ③ **A C P O W E R** : Green LED is Lit. The AC power connected to the control panel.
- ④ **D C P O W E R** : The AC power failure and the DC power connected to the control panel.
- ⑤ **SYSTEM TROUBLE** : Red LED is Lit. The fuse fault of main board.
- ⑥ **O / C F A U L T** : Red LED is Lit. Indicating zone open circuit fault.
- ⑦ **T R O U B L E** : Red LED is Lit. Indicating tank water below level or other trouble.
- ⑧ **STATION ALARM** : Red LED is Lit. The manual pull station are activated.
- ⑨ **T E L E P H O N E** : Red LED is Lit. Indicating the phone call.
- ⑩ **F I R E** : Red LED is flashing. **Fire alarm !**
- ⑪ **Z O N E F I R E** : Red LED is Lit. Indicating the zone has detected the fire.
- ⑫ **ZONE O/C FAULT** : Yellow LED is Lit. Indicating the zone open circuit fault.
- ⑬ **ALARM BUZZER** : 85dB @ 1m (min.)
- ⑭ **TROUBLE BUZZER** : Zone open circuit : once 1 sec. Telephone & trouble alarm : always

※ **SWITCH OPERATION : UP - SETTING , DOWN - CLOSE**

- ⑮ **Battery Test** : Pressing the button will test the battery.
- ⑯ **Fire Test** : Down the switch to test zone fire circuit. (Test mode)
- ⑰ **O / C Test** : Up the switch to test zone open circuit. (Test mode)
- ⑱ **Fault Silence** : Unlock the switch to silence **TROUBLE BUZZER**.
- ⑲ **Main Silence** : Unlock the switch to silence **FIRE ALARM BUZZER**.
- ⑳ **Aux. Silence** : Unlock the switch will cause all sector sounder outputs to switch off.
- ㉑ **Fire Storage** : Unlock the switch disable to double check the fire alarm signal.
- ㉒ **Aux Relay** : Unlock the switch to control the relay NC or NO output.
- ㉓ **Auto Reset** : Unlock the switch, auto reset to standby mode.
- ㉔ **System Reset** : Pressing the button will reset to standby mode.
- ㉕ **Zone Test** : Pressing the button will test zones fire / open circuit. (in test mode)

※ SPECIFICATIONS

Model	CL-2100
Standard	CNS .8877 .Z2044
Power	110 or 220 VAC (Switch) , 50 / 60 Hz
Battery	24 VDC / 1.2Ah
Circuit Voltage	24VDC , (18VDC ~ 30VDC)
E.O.L Resistor	10K Ω ELR (1/4 ~ 1/2W Resistor)
Alarm Buzzer	DC 24V 90dB
Aux. Relay	AC 220V 5A (550VA)

● FIRE STORAGE (for double check) ●

